

Durostyle Colour Selection

Colour	Finish	Suggested Melamine Match
Lumisade Silk Matt	Silk Matt	<i>No Melamine Match</i>
Sugar Silk Matt	Silk Matt	<i>No Melamine Match</i>
Sketch Silk Matt	Silk Matt	<i>No Melamine Match</i>
Pitch Black Silk Matt	Silk Matt	<i>No Melamine Match</i>
Designer White Satin	Satin	<i>No Melamine Match</i>
Snowdrift Satin	Satin	Melteca Snowdrift Satin
White Satin	Satin	<i>No Melamine Match</i>
NX White Satin	Satin	<i>No Melamine Match</i>
Alabaster Satin	Satin	<i>No Melamine Match</i>
Designer White	Textured	Melteca Super White Naturale
Snowdrift	Textured	Melteca Snowdrift Naturale
Arctic White	Textured	Bestwood Arctic White Embossed
Platinum White	Textured	<i>No Melamine Match</i>
Brulee	Textured	Bestwood Brulee Embossed
Cloud White	Textured	Bestwood Cloud White Embossed
Baikal	Textured	Melteca Baikal Naturale
Light Grey	Textured	Melteca Seal Grey Naturale
Mist	Textured	Melteca Mist Naturale
Onyx Grey	Textured	<i>No Melamine Match</i>
Bullet	Textured	Melteca Bullet Pearl
French Navy	Textured	<i>No Melamine Match</i>
Black	Textured	Melteca Black Pearl

Colours current as at 2nd May 2022

N.B. The melamine colour matches mentioned above represent the best colour match. These are suggested colour matches only. It is the responsibility of the purchaser to ensure acceptance of colour matching.

Care & Maintenance

- **Durostyle** doors are made from High Moisture-Resistant E-Zero MDF substrate, but as with any MDF product, are not waterproof. Care should be taken to ensure they are not exposed to high levels of heat, moisture, steam and humidity and that any accidental spills are wiped up immediately.
- For cleaning **Durostyle** doors we recommend wiping with a soft damp cloth with warm soapy water and then drying with a soft dry cloth. A small amount of mild chemical spray may be used for stains that cannot be removed with soapy water. Please refer to the manufacturer's recommendations before using chemical spray.
- Do not use commercial cleaning products, abrasive materials, acids, solvents, thinners, or any other strong cleaners to clean **Durostyle** doors. Do not expose your **Durostyle** doors and panels to high levels of heat, moisture, steam or humidity, or use your kettle, toaster or other heat emitting appliances directly behind, below, or next to **Durostyle** doors or panels. Doing any of these will void your 10-year warranty.

Installation Guidelines

- **Durostyle** 180 wrapped end panels or **Touchtex** (PVC edged Melamine) end panels must be placed on either side of ovens, dishwashers and other heat generating appliances so that heat escaping from these appliances does not project directly onto the edge of a door or drawer front.
- Wall mounted ovens must also have, **Durostyle** 180 wrapped end panels or **Touchtex** end panels above and below them to protect the doors and panels directly above/below the oven.
- Over-cupboard doors must be at least 600mm above bench height (750mm if above a heat source)
- It is recommended that an under-panel that covers the edge of the door is used to protect over-cupboard doors from heat from below.
- Full height or on-bench doors and panels must be at least 250mm away (horizontally) from a hob. Doors and panels closer than 250mm must have some form of heat protection such as a glass splashback.
- If **Durostyle** doors and panels are supplied with a plastic protective film, this must not be removed until installation of the cabinetry is complete.
- Panelform will not cover replacement costs of **Durostyle** doors and panels where damage has been caused by the incorrect installation of appliances, or where appliance wear and tear has caused abnormal heat emission.

Careful attention to the above installation guidelines will provide you with at least 10 years of use from **Durostyle** doors and panels. Failure to follow any of these installation guidelines will void your 10-year guarantee.